

Load Cells for WSID 5th Dummy

Load Cell Model #	Load Cell Description	Calibration Fixture	Axis
<u>IF-371</u>	2D ITRACC Displacement Sensor - Short Range	TE-3600	DY
<u>W50-71001</u>	6-Axis Universal Lower Neck Load Cell	W50-71230	FX, FY, FZ, MX, MY, MZ
<u>W50-71005</u>	6-Axis Universal Neck Load Cell	W50-71230	FX, FY, FZ, MX, MY, MZ
<u>W50-71051</u>	Uniaxial Pubic Load Cell Assembly	W50-71056	FY
<u>W50-71090</u>	3 Axis Shoulder Load Cell, Left Side	W50-71850	FX, FY, FZ
<u>W50-71091</u>	3-Axis Shoulder Load Cell, Right Side	W50-71850	FX, FY, FZ